
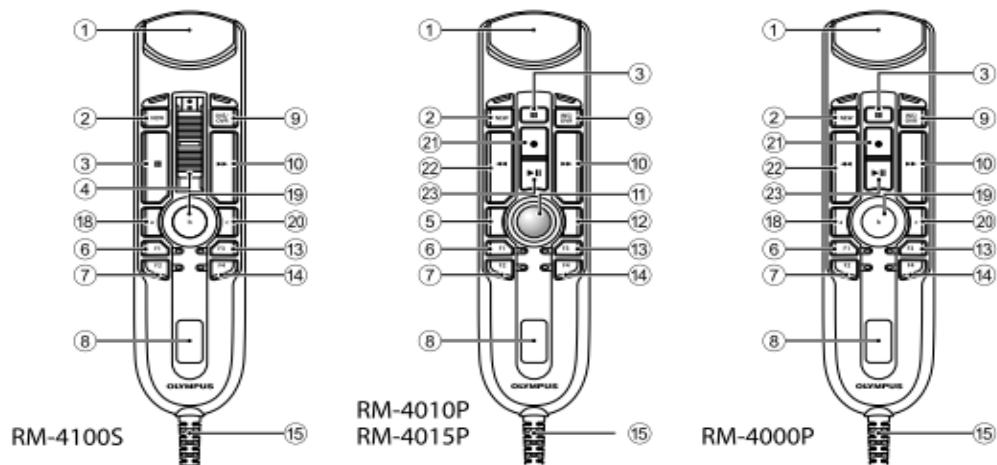


## ■ Product Overview

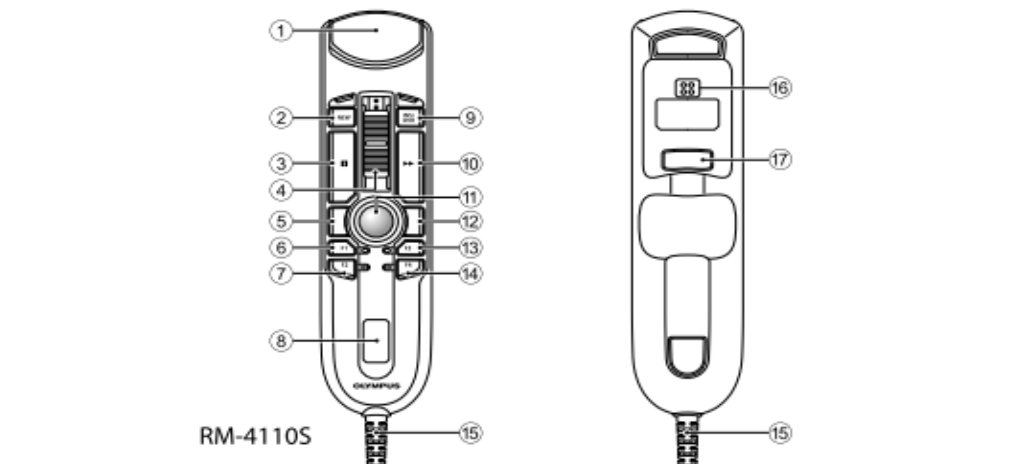

- ① Main microphone
- ② **NEW** button
- ③ **i** button
- ④ Slide switch (●: Record / ■: Stop / ►: Play / ◀◀: Review)
- ⑤ Mouse L
- ⑥ **F1** (Function 1) button
- ⑦ **F2** (Function 2) button

- ⑧ Speaker
- ⑨ **INS/OVR** button
- ⑩ ►► (Fast Forward) button
- ⑪ Trackball
- ⑫ Mouse R
- ⑬ **F3** (Function 3) button
- ⑭ **F4** (Function 4) button
- ⑮ USB cable

- ⑯ 2<sup>nd</sup> microphone
- ⑰ Back button
- ⑱ **a** (Function a) button
- ⑲ **b** (Function b) button
- ⑳ **c** (Function c) button
- ㉑ ● (Record) button
- ㉒ ◀◀ (Rewind) button
- ㉓ ►|| (Play/Pause) button

## ■ Button modes for Dragon and Windows speech Recognition

### Dragon mode

Button/Switch	Command	Shortcut (PC keyboard)	Model (RM)
NEW	Tab backwards	{shift+Tab}	4110S, 4100S, 4010P, 4015P, 4000P
<b>i</b>	Mark backwards	{Ctrl+Shift+Left}	4110S, 4100S
	Show dictation box	{Ctrl+Shift+D}	4010P, 4015P, 4000P
INS/OVR	Tab forward	{Tab}	4110S, 4100S, 4010P, 4015P, 4000P
<b>◀◀</b>	—	—	4110S, 4100S
	Mark backwards	{Ctrl+Shift+Left}	4010P, 4015P, 4000P
<b>●</b>	Dragon microphone on/off	{Numkey+}	4110S, 4100S, 4010P, 4015P, 4000P
	—	—	4110S, 4100S, 4010P, 4015P, 4000P
<b>▶▶ / ▶</b>	—	—	4110S, 4100S
	Enter	{Enter}	4010P, 4015P, 4000P
<b>▶▶</b>	Next field	{Ctrl+Shift+N}	4110S, 4100S, 4010P, 4015P, 4000P
F1	Force command recognition	{Ctrl}	4110S, 4100S, 4010P, 4015P, 4000P
F2	Transfer text	{Ctrl+Shift+T}	4110S, 4100S, 4010P, 4015P, 4000P
F3	Force dictation recognition	{Shift}	4110S, 4100S, 4010P, 4015P, 4000P
F4	Show dictation box	{Ctrl+Shift+D}	4110S
	—	—	4100S, 4010P, 4015P, 4000P
Mouse L	—	—	4110S, 4010P, 4015P
a	Show dictation box	{Ctrl+Shift+D}	4100S, 4000P
Track ball & CenterClick	—	—	4110S, 4010P, 4015P
b	Transfer text	{Ctrl+Shift+T}	4100S, 4000P
Mouse R	—	—	4110S, 4010P, 4015P
c	Hidden dictation box	{Ctrl+Shift+H}	4100S, 4000P

### Windows Speech Recognition mode

Button/Switch	Command	Shortcut (PC keyboard)	Model (RM)
NEW	Skip backwards	{Ctrl+Left}	4110S, 4100S, 4010P, 4015P, 4000P
<b>i</b>	Mark backwards	{Ctrl+Shift+Left}	4110S, 4100S
	Tab forward	{Tab}	4010P, 4015P, 4000P
INS/OVR	Skip forward	{Ctrl+Right}	4110S, 4100S, 4010P, 4015P, 4000P
<b>◀◀</b>	—	—	4110S, 4100S
	Mark backwards	{Ctrl+Shift+Left}	4010P, 4015P, 4000P
<b>●</b>	Windows microphone on/off	{Ctrl+Windows}	4110S, 4100S, 4010P, 4015P, 4000P
	—	—	4110S, 4100S, 4010P, 4015P, 4000P
<b>▶▶ / ▶</b>	—	—	4110S, 4100S,
	Enter	{Enter}	4010P, 4015P, 4000P
<b>▶▶</b>	Mark forwards	{Ctrl+Shift+Right}	4110S, 4100S, 4010P, 4015P, 4000P
F1	Copy	{Ctrl+C}	4110S, 4100S, 4010P, 4015P, 4000P
F2	Maximize current Window	{Windows+Up}	4110S, 4100S, 4010P, 4015P, 4000P
F3	Paste	{Ctrl+V}	4110S, 4100S, 4010P, 4015P, 4000P
F4	Close Application	{Alt+F4}	4110S, 4100S, 4010P, 4015P, 4000P
Mouse L	—	—	4110S, 4010P, 4015P
a	Page Up	{Page Up}	4100S, 4000P
Track ball & CenterClick	—	—	4110S, 4010P, 4015P
b	Open Cortana	{Windows+C}	4100S, 4000P
Mouse R	—	—	4110S, 4010P, 4015P
c	Page Down	{Page Down}	4100S, 4000P

Wheeler Business Machines  
 16 Frontenac Street, SE  
 Grand Rapids, MI 49548  
 877-245-3335  
 sales@wheelermachines.com